

# Multimedia Rack User MANUAL for the New Classroom Building



1. Open the Rack.

Projector is placed on an appropriate stand.



Receiver

DVD

Computer

VCR

2. Take out the necessary remote controls of the devices - **Fig.1.**



Remote control for the NEC Projector

Remote control for the LG Video player

Remote control for the DENON Receiver

Remote control for the DENON DVD player

**Fig.1**

3. Switch on the Projector – select the button **ON** from the remote control of the Projector - **Fig.2.**



Switch ON the Projector

**Fig.2**

## How to use the COMPUTER



**Fig.3**

**Switch the computer ON/OFF**


1. Switch on the Computer with the Power button - **Fig.3**.
2. To show the picture on the white screen - use the remote control of the Projector and click on button **COMPUTER** ( **Fig.4**)

**Select the source -  
COMPUTER**



**Fig.4**

3. Log-in on the computer using your own account and the appropriate domain.
4. If you want to have **sound** during the usage of the computer, you should switch on the Receiver - **Fig.5**.
  - 4.1. Press the button ON/STANDBY - it should be in green
  - 4.2. Use the **Input Selector** button and choose the **input AUX** which appears on the display of the receiver. You can control the sound volume with the **Master Volume** button.

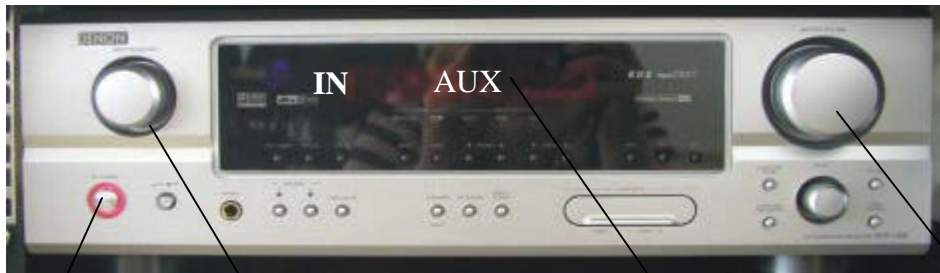

**ON/STANDBY**

**Input Selector**

**Fig.5**

**AUX input**

**Volume control**

**OR**

use the remote control of the Receiver (RC-1014)



4.1a. Select the **AUX** button on the remote control of the Receiver

**Fig.6**

# How to use the DVD player



**Switch the DVD player ON/OFF**

**Fig.7.**

1. Switch on the DVD Player with the **POWER** button from the remote control or from the device
2. To show the picture on the white screen - use the remote control of the Projector and click on button **VIDEO** ( **Fig.8**)

Select the source – VIDEO



**Fig.8.**

3. To have sound you need to switch on the Receiver - **Fig.9.**
  - 3.1. Press the button ON/STANDBY - it should be in green.
  - 3.2. Use the **Input Selector** button and choose the **input DVD** which appears on the display of the receiver. You can control the sound volume with the **Master Volume** button.



**ON/STANDBY**

**Input Selector**

**Fig. 9**

**DVD input**

**Volume control**

**OR**

use the remote control of the Receiver (RC-1014) **Fig.10**




3.1a. Select the **DVD** button on the remote control of the Receiver

**Fig.10**

4. Put the DVD disc in the DVD player and use the necessary buttons on the DVD player or on the remote control to **PLAY, STOP or PAUSE.**

## How to use the Video player

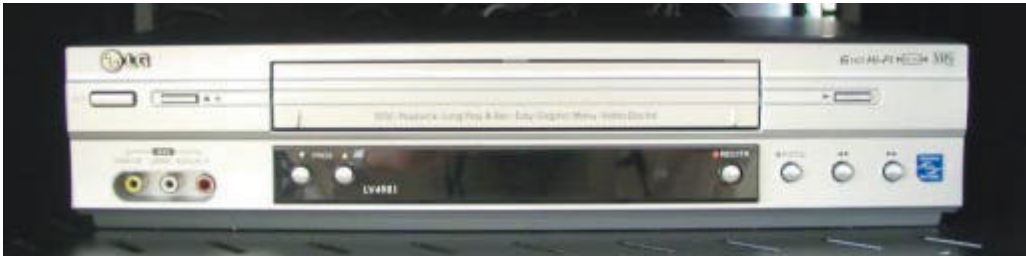

1. Switch on the VCR Player with the **POWER** button from the remote control of the LG VCR player or from the device.
2. To show the picture on the white screen - use the remote control of the Projector and click on button **VIDEO** ( Fig.11)

Select the source – VIDEO



Fig.11.

3. To have sound you need to switch on the Receiver -**Fig.12.**
  - 3.1. Press the button ON/STANDBY - it should be in green.
  - 3.2. Use the **Input Selector** button and choose the **input VCR** which appears on the display of the receiver. You can control the sound volume with the **Master Volume** button.



**ON/STANDBY**    **Input Selector**

Fig.12

**VCR input**

**Volume control**

**OR**

use the remote control of the Receiver (RC-1014), **Fig.13**



3.1a. Select the **VCR** button on the remote control of the Receiver

Fig.13

4. Put the cassette in the VCR player and use the necessary buttons on the VCR player or on the remote control to **PLAY**, **STOP** or **PAUSE**.

# AFTER YOU FINISH

## (Check list)

### A. If you have used:

#### I. The computer

1. Turn off the computer ( From the START menu - select Shut down - and in the dialog window select Shut down). If you miss to do this your data will be exposed for the next rack user.
2. Switch off the monitor.

#### II. The VCR player

Click on the **EJECT** button of the Remote control to take out the cassette. Switch off the player with **POWER** button.

#### III. The DVD Player

Click on the **EJECT** button of the Remote control to take out the DVD disk. Switch off the player with **POWER** button.

### B. Switch off the Receiver

Click on the **ON/STANDBY** button on the device or use **OFF** button of the remote control.

**C. Turn off the Projector** – click twice on the button **OFF** (**Fig.12**) on the remote control of the Projector.

Switch Off the projector



Fig.14.

- \* Return all remote controls in the Rack.
- \* Lock the Rack.